



Box contents

- the stroller frame
- 1 front wheel
- 2 rear wheels
- 1 rain cover
- 1 InnoPet flag
- 1 tow bar with bike connector
- 1 bag with reflectors



1. Rear wheels

- Attach the reflectors, to the stroller frame and the rear wheels.
- Press the metal clip on the rear wheel and push onto the rear axle.
- Release the clip and pull the wheel outwards to confirm it is secured.
- To remove the rear wheel, press the metal clip and pull the wheel from the axle.



2. Front wheel

- Place the pin of the front wheel fork in the wheel unit on the front of the stroller.
- To remove the front wheel, simply push the plastic button at the top of the wheel unit and pull the wheel down.



3. Unfolding

- Release the clasp on the side of the stroller.
- Unfold the stroller by pulling the push bar upwards.
- Secure the frame by pressing down on the supports on both sides of the stroller.




4. Push bar

- Push the buttons on the outside of the push bars at the same time to adjust the height of the push bar.
- Place the pushbar in the downward position when folding the stroller.



5. Folding

- Place the pushbar in the downward position.
- Unlock the supports on both sides by unlocking them and pulling upwards.
- Fold down the stroller and fasten the clasp to prevent it from unfolding during transport.

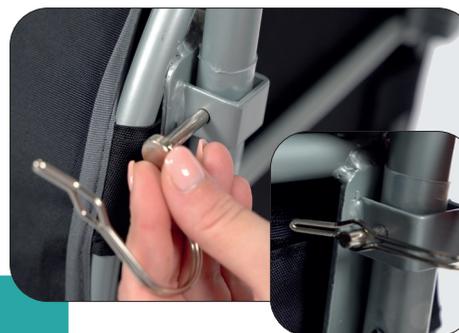

Tow bar

- Remove the front wheel of the stroller.
- Push the tow bar through the U-shaped joints under the stroller.
- Push the safety pin through the hole of the joint and tow bar. Secure by pushing the hook over the pin.



Bike connector

- With a wrench, take the rear wheel's axle nut off and place the bike connector on the axle.
- Place the axle nut back and tighten.
- Insert the towbar into the bike connector. Push the pin through the hole of the tow bar and pull the hook over the end of the tow bar.

A man with glasses and a dark jacket is riding a black bicycle on a paved path. Attached to the back of the bicycle is a black and white dog trailer. A dog is sitting inside the trailer, which has a red flag on top. The background shows a park-like setting with trees and a wooden bench.

InnoPet

Sporty Dog Trailer Deluxe

Instruction manual

Contact customer service:
+31 (0) 85 079 60 12
support@innopet.nl
<https://innopet.nl/en/contact>

Safety instructions

Take precautions to prevent the bike trailer from tipping over:

- Do not exceed speed limit of 16km/h (10 mph) on straight roads.
 - Do not exceed speed limit of 5km/h (3.1 mph) when turning corners.
 - Do not use on motorised vehicles or e-bikes.
 - Keep in mind that the centre of gravity may shift during transit, when the dog moves in the trailer.
- InnoPet is not liable for any damage caused by not following this advice.

Caution

- This carrier is for pets only.
- Max. capacity 30kg.
- Use the fastening lines at all times.
- Fully unzip the cabin before folding.
- Do not use when nuts or screws are loosening.
- Clean fabric with mild household soap and water.
- If wheel squeaks or rotates with difficulty, apply grease (like vaseline).
- Read warranty terms on innopet.



Scan the QR code for detailed video instructions for your InnoPet stroller or visit innopet.nl

