



## Box contents

- the stroller frame
- 1 front wheel set
- 1 rear axle with wheels
- 1 cup holder



## 1. Unfolding

- Undo the clasp on the side of the stroller.
- Lift the stroller by the push bar to unfold.



## 2. Rear axle

- Push the rear axle with the rear wheels onto the frame of the stroller.
- To remove the axle, use a retractable ballpoint pen and push in the pins on the frame.



## 3. Front wheel

- Put the front wheel on the frame, you will hear a click when it is secured.
- To remove the front wheel, you will need pliers. Using the pliers, push in the latch and pull the wheel off the frame.



## 4. Fastening cover

- Make sure the fabric cover is always correctly attached to the frame.
- The fabric should be folded over the frame and secured with the velcro straps.



## 5. Folding

- Make sure the cabin is unzipped and the front wheel is not locked.
- Pull the release on both sides at the same time. The stroller will now fold automatically.
- Fasten the clasp on the side to prevent unfolding during transport.


## Tip 1

The front wheel can rotate 360 degrees. To prevent the wheel from turning, fixate it by pushing the clip on the front wheel upwards.



## Tip 2

Take the cup holder and push it over the bars of the frame until the screws fall into the holes of the cup holder.

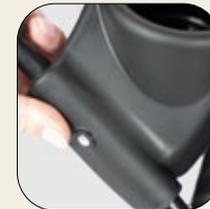

## Caution


- This carrier is for pets only.
- Max. capacity 12,5kg
- Use the fastening lines at all times.
- Fully unzip the cabin before folding.
- Do not use when nuts or screws are loosening.
- Clean fabric with mild household soap and water.
- If wheel squeaks or rotates with difficulty, apply grease (like vaseline).
- Read warranty terms on [innopet.nl](http://innopet.nl)



**InnoPet**

# All Terrain Instruction manual

Contact customer service:  
+31 (0) 85 079 60 12  
support@innopet.nl  
<https://innopet.nl/en/contact>

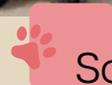

Scan the QR code for  
detailed video instructions  
for your InnoPet stroller or  
visit [innopet.nl](https://innopet.nl)

