



Box contents

- the stroller frame
- 1 front wheel
- 2 rear wheels
- 1 cup holder



1. Unfolding

- Undo the clasp on the side.
- Lift the stroller by the push bar to unfold the stroller.



2. Rear wheels

- Place the pin of the wheel into the hole in the rear axle hole of the frame.
- To remove the rear wheel, lift up the metal tab on the frame near the wheel. The wheel releases and can be pulled out of the axle hole.



3. Front wheel

- Push the pin on the front wheel into the connection on the front of the stroller.
- To remove the front wheel, pull on the tab on top of the front wheel connection on the frame. This will release the front wheel.



4. Cabin buckle

- Simply close the cabin with the buckle in the front.
- Release the buckle by pressing in the button on the front of the buckle.



5. Folding

- Make sure the front of the cabin is open and the front wheel is unlocked.
- Disengage the security lock by sliding the security knob to the left.
- Press the handle downwards to fold the stroller.

Tip 1

To attach the cupholder, press the cupholder onto the notch on the side of the stroller.



Tip 2

The front wheel can rotate 360°. To prevent the wheel from turning, lock it by pushing the switch above the wheel upward.



Caution

- This carrier is for pets only.
- Max. capacity 25kg.
- Use the fastening lines at all times.
- Fully open the cabin before folding.
- Do not use when nuts or screws are loosening.
- Clean fabric with mild household soap and water.
- If wheel squeaks or rotates with difficulty, apply grease (like vaseline).
- Read warranty terms on innopet.nl



InnoPet
Bringing Back Happiness

Premium Comfort

Instruction manual

Contact customer service:
+31 (0) 85 079 60 12
support@innopet.nl
<https://innopet.nl/en/contact>



Scan the QR code for
detailed video instructions
for your InnoPet stroller or
visit innopet.nl

