



Box contents

- the stroller frame
- 1 front wheel
- 2 rear wheels
- 1 rain cover



1. Rear wheels

- Attach the rear wheel by placing the pin of the wheel into the hole of the rear axle. Repeat for both sides.
- To remove the wheel, press the plastic button which is found next to the wheel underneath the stroller frame.




2. Front wheel

- Place the pin of the front wheel fork in the wheel unit on the front of the stroller.
- To remove the front wheel, simply push the plastic button at the top of the wheel unit and pull the wheel down.



3. Unfolding

- Release the clasp on the side of the stroller.
- Unfold the stroller by pulling the push bar upwards.
- Secure the frame by pressing down on the supports on both sides of the stroller.

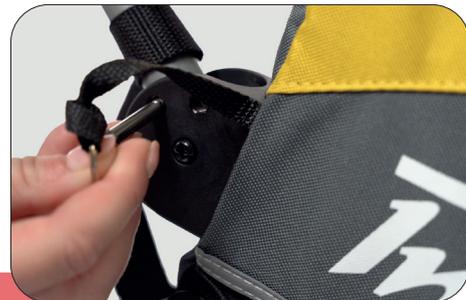

4. Push bar

- Adjust the push bar by taking out the pins on each side.
- Adjust the height of the bar and place the pins back in the second hole.
- Fold the push bar back up when folding the stroller.



5. Folding

- Place the pushbar in the upward position.
- Unlock the supports on both sides by pulling the plastic latches upwards.
- Fold down the stroller and fasten the clasp to prevent it from unfolding during transport.

Bike kit

With a bike kit, this stroller can be connected to a bicycle and used as a bike trailer for your dog.

For instructions how to use the bike kit, scan the QR code on the front of this manual or visit innopet.nl.

Safety instructions

Take precautions to prevent the bike trailer from tipping over:

- Do not exceed speed limit of 16 km/h (10 mph) on straight roads.
- Do not exceed speed limit of 5 km/h (3.1 mph) when turning corners.
- Do not use on motorised vehicles or e-bikes.
- Keep in mind that the centre of gravity may shift during transit, when the dog moves in the trailer.

InnoPet is not liable for any damage caused by not following this advice.

Caution

- This carrier is for pets only.
- Max. capacity 50kg.
- Use the fastening lines at all times.
- Fully unzip the cabin before folding.
- Do not use when nuts or screws are loosening.
- Clean fabric with mild household soap and water.
- If wheel squeaks or rotates with difficulty, apply grease (like vaseline).
- Read warranty terms on innopet.nl

A woman with blonde hair, wearing a green long-sleeved shirt and a brown puffer vest, is pushing a blue and yellow InnoPet Hercules 2.0 dog stroller. A golden retriever is sitting inside the stroller. The scene is set on a city street with trees, parked cars, and buildings in the background.

InnoPet

Hercules 2.0

Instruction manual

Contact customer service:
+31 (0) 85 079 60 12
support@innopet.nl
<https://innopet.nl/en/contact>



Scan the QR code for detailed video instructions for your InnoPet stroller or visit innopet.nl

