

Box contents

- •the stroller frame
- •the stroller cabin
- •2 front wheels
- •1 rear axle with rear wheels
- •1 cabin pad
- •1 cupholder



- •Undo the clasp on the side of the stroller.
- •Lift the stroller by the push bar to unfold.



2. Rear wheels

- Push the rear axle with the rear wheels onto the frame of the stroller.
- •To remove the axle, use a retractable ballpoint pen and push in the pins on the frame.



Attach the cup holder to the frame by aligning and inserting it until a "click" sound is heard. No hot beverages.



Tip 2

Fix the cabin to the stroller by folding the velcro flaps at the bottom of the cabin, over the bars of the frame.



3. Front wheels

- •Place the pins of the front wheels on the frame.
- •To remove the front wheel, press the button then release it.



4. Unfolding the cabin

- •Pull the metal frame bars outward and attach them to the plastic clips at the bottom of the cabin.
- Place the inner cushion inside.



5. Folding the frame

- •Slide the switch on the top of the pushbar. Press the button on the pushbar at the same time.
- The frame will now fold down.
- •Secure the frame with the clasp on the side during transport.
- •For the most compact fold, remove the cabin and wheels.

Caution

- •This product is for pets only.
- •Use the fastening lines at all times.
- •Max. load capacity frame: 20 kg
- •Max. load capacity cabin: 15 kg
- •Do not use when nuts or screws are loosening.
- •Do not place heavy objects on top of the pet stroller.
- •Clean stains on the fabric with warm water and mild soap.
- •If wheel squeaks or rotates with difficulty, apply grease like vaseline (no WD40).
- •Read warranty terms on innopet.nl



Contact customer service: +31 (0) 85 079 60 12 support@innopet.nl https://innopet.nl/en/contact ons for your InnoPet stroller or visit innopet.nl